

Axial Piston Fixed Motor HA2FM/E Series 61/69/63

Series:61/69 Displacement:23-180 mL/r Rated Pressyre:30 MPa Max.Pressyre:35 MPa

Series:63 Displacement:23-160 mL/r Rated Pressyre:40 MPa Max.Pressyre:45 MPa



Features



- Axial piston motor of bent-axis design for hydrostatic drives in open and closed circuits
- The output speed is directly proportional to the input flow and inversely proportional to the displacement
- The output torque increases with the pressure differential between the high- and low-pressure sides
- Tapered piston with sealed piston ring
- Pressure relief valve for protection of hydrostatic drives against overload
- Compact design and high total efficiency

Contents

	1			
- 4	7	`	h	
			◂	

Counterbalance Valve BVD......26



Model Code

	С	Α		I	K		M	Ν	Ρ	R	V		Z		Zaa
HA2F			/		W	_						_		+	

Axial piston unit

_	Bent-axis design, fixed displacement piston motor	HA2F
---	---------------------------------------------------	------

Type

		23	28	32	45	56	63	80	90	107	125	160	180	
С	Standard	•	•	•	•	•	•	•	•	•	•	•	•	М
	Plug-in	0	0	0	•	•	•	•	•	•	•	•	•	Е

Displacement

	Geometric displacement	23	28	32	45	56	63	80	90	107	125	160	180	
^	in mL/r													

Series

		23	28	32	45	56	63	80	90	107	125	160	180	
١,	7-piston 30MPa				•		•				•		0	61
'	7-piston 40MPa						•		•		•		0	63
	9-piston 30MPa	0	0	0	0	0	0	0	0	0	0	0	•	69

Direction of rotation (viewed on drive shaft)

	,													
K		23	28	32	45	56	63	80	90	107	125	160	180	
	Bi-directional													W

Sealing material

		23	28	32	45	56	63	80	90	107	125	160	180	
М	NBR seal + FKM Shaft seal	0	0	0	0	0	0	0	0	0	0	0	0	N
IVI	NBR seal	•	•	•	•	•	•	•	•	0	0	•	•	Р
	FKM seal	•	•	•	•			•	•	•	•	•		V

Drive shaft

		23	28	32	45	56	63	80	90	107	125	160	180	
	Splined shaf DIN 5480	•	•	•	•	•	•	•	•	•	•	•	•	Z
N	Spiriled Strait Dity 5460	•	•	•	•		•		•	•	•		•	Α
IN .	Devalled keyed short DIN 6995	•	0	•	•	•	•	0	0	•	0	0	0	Р
	Parallel keyed shaf DIN 6885	•	•	•	0	•	•	•	•	0	0	0	0	В
	Splined shaft SAE J744 ¹⁾	0	0	0	•	0	0	0	0	0	0	0	0	S

^{1):} Splined shaft SAE J744(ANSI B92.1a)1 1/4 14T 12/24 DP

HA2FM/E | Axial Piston Fixed Motor



> Model Code

	С	Α		I	K		M	Ν	Ρ	R	V		Z		Zaa
HA2F			/		W	_						_		+	

Mounting flange 1)

		23	28	32	45	56	63	80	90	107	125	160	180	
P	4-hole, as per ISO 3019-2	•											•	В
	2-hole, ISO 3019-2 equivalent	0	0	0	•	•	•	•	•	•	•	•	•	L

Working port

		23	28	32	45	56	63	80	90	107	125	160	180	
	SAE flange ports A and B at rear	•	•	•	•	•	•	0	0	0	0	0	0	010
	SAE flange ports A and B at side	•	•	•	•	•	•	•	•	•	•	•	0	020
	SAE flange ports A and B at side With flushing valve	•	•	•	•	•	•	•	•	•	•	•	0	027
	Metric threaded ports A and B at side	•	•	•	•	•	•	0	0	0	0	0	0	030
	Metric threaded ports A and B at side With flushing valve	•	•	•	0	0	0	0	0	0	0	0	0	037
	Metric threaded ports A and B, at side&rear With side threads plugged	•	•	•	•	•	•	0	0	0	0	0	0	040
R	SAE flange ports A and B at bottom	0	0	0	•	•	•	•	•	•	•	0	0	100
	With 1-stage pressure relief valve (without pressure boost facility) Port plate without counterbalance valve	0	0	0	0	0	0	0	0	•	•	0	0	171
	With 1-stage pressure relief valve (without pressure boost facility) Port plate with HBVD counterbalance valve	0	0	0	0	0	0	0	0	•	•	0	0	178
	With 1-stage pressure relief valve (without pressure boost facility) Port plate without counterbalance valve	0	0	0	0	0	0	•	•	•	•	•	0	181
	With 1-stage pressure relief valve (without pressure boost facility) Port plate with HBVD counterbalance valve	0	0	0	0	0	0	•	•	•	•	•	•	188
	With 1-stage pressure relief valve (without pressure boost facility)	0	0	0	0	0	0	0	•	0	0	0	0	191
	With 2-stage pressure relief valve (with pressure boost facility)	0	0	0	0	0	0	0	0	0	0	0	0	192

	Without valve	0
	Pressure relief valve (without pressure boost facility)	1
Valve	Pressure relief valve (with pressure boost facility)	2
	With flushing valve	7
	With counterbalance valve	8

1): B: for HA2FM only; L: for HA2FE only.

HA2FM/E | Axial Piston Fixed Motor 03



> Model Code

	С	Α		I	K		M	Ν	Р	R	V		Z		Zaa
HA2F			/		W	_						_		+	

Speed sensor

		23	28	32	45	56	63	80	90	107	125	160	180	
	Without speed sensor(without code)	•	•	•	•	•	•	•	•	•	•	•	•	
	Prepared for HDD speed sensor	•	0	•	•	•	0	•	•	•	•	•	•	F0
V	With HDD Hall-effect speed sensor (without connector)	•	0	•	•	•	0	•	•	•	•	•	•	F
	With HDD Hall-effect speed sensor (DT04-4P connector)	0	0	0	0	0	0	0	0	0	•	•	•	F1
	With HDD Hall-effect speed sensor (DTM04-4P connector)	0	0	0	0	0	0	0	0	0	0	0	0	F2

Specia	l configuration													
		23	28	32	45	56	63	80	90	107	125	160	180	
	Without special configuration (without code)	•	•	•	•	•	•	•	•	•	•	•	•	
	Low-pressure flushing 0.8 MPa	0	•	•	0	•	0	0	0	0	0	0	0	А
	Flow of flushing valve 3 L/min	0	•	0	0	0	0	0	0	0	0	0	0	-C030
	Flow of flushing valve 3.5 L/min	0	0	0	0	0	0	•	0	0	0	0	0	-C035
Z	Flow of flushing valve 5 L/min	0	0	0	0	0	0	•	•	0	0	0	0	-C050
	Flow of flushing valve 8 L/min	0	0	0	0	0	•	•	•	•	0	0	0	-C080
	Flow of flushing valve 10 L/min	0	0	0	0	0	•	•	0	0	0	0	0	-C100
	End cap with differential valve (constant rotational speed)	0	0	0	0	0	0	0	0	0	0	0	0	-CS
	End cap with on/off valve	0	0	0	0	0	0	0	0	0	0	0	0	-DS
	Special configuration	•	•	•	•	•	•	•	•	•	•	•	•	***



> Model Code

	С	Α		1	K		М	Ν	Р	R	V		Z		Zaa
HA2F			/		W	_						_		+	


Counterbalance valve


		23	28	32	45	56	63	80	90	107	125	160	180
	HBVD20W27L/41B-V01K00D0600S00A	0	0	0	0	0	0	•	•	0	0	0	0
	HBVD20W28L/41B-V01K00D0600S00A	0	0	0	0	0	0	0	0	•	•	0	
Zaa	HBVD25W38L/41B-V16K00D1200S00A	0	0	0	0	0	0	0	0	•	0	•	0
	HBVD25W38L/41B-V16K00D1200S00	0	0	0	0	0	0	0	0	0	•	•	
	HBVD25W38L/41B-V07K00D0600S00A	0	0	0	0	0	0	0	0	0	0	•	•
	HBVD25W38L/41B-V07K00D0800S00A	0	0	0	0	0	0	0	0	0	•	0	•

Available	On request	 Not available 	Recommended model



Structure

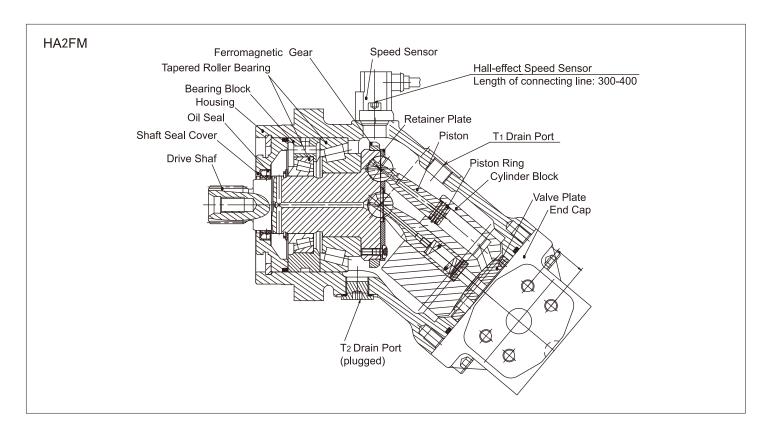

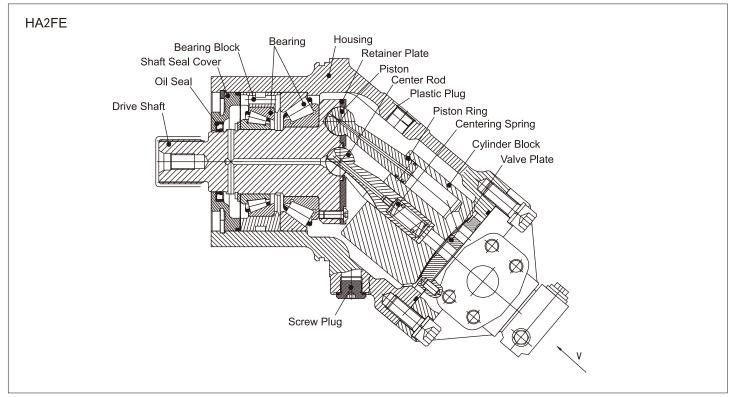



> Hydraulic Fluid

Mineral oil

Working Viscosity

In order for the optimum efficiency and service life, it is recommended to select the working viscosity (at working temperature) within the range below:

V_{opt}= optimal working viscosity 16...36 mm²/s

It is subject to the circuit temperature of a closed circuit and the reservoir temperature of an open circuit.

Limit Viscosity


Limit viscosity:

 $V_{min}=5$ mm²/s

Short-term operation, permissible maximum temperature t_{max} =+115°C V_{max} =1600mm²/s

Short-term operation, cold start(tmin=-40°C)

Selection Diagram

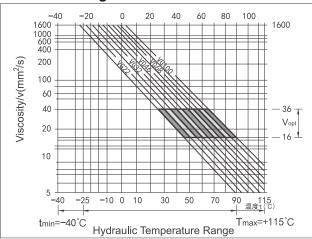

> Instructions on Selection of Hydraulic Fluid

The working temperature dependent on the ambient temperature is required for correct selection of hydraulic fluid. It refers to the circuit temperature of a closed circuit and the reservoir temperature of an open circuit.

The hydraulic fluid should be so selected that the working viscosity in the working range is within the optimum range (V_{opt} , the shaded area on the selection diagram). The higher viscosity is recommended under the same conditions.

For example: At an ambient temperature of X $^{\circ}$ C, the working temperature of the circuit is 60 $^{\circ}$ C. The viscosity within the optimum range (V_{opt} , shaded area) is VG46 or VG68 and the latter should be selected.

Note: The case drain temperature depends on the pressure and speed, and it is always higher than the circuit temperature. The temperature at any point within the system should not exceed +115 °C.

Filtration

Finer filtration improves the cleanliness level of the hydraulic fluid, thus increasing the service life of the axial piston unit. To ensure normal operation of the axial piston unit, a cleanliness level of at least 9 according to NAS 1638 or 18/15 according to ISO/DIS 4406 is to be maintained.

When the hydraulic fluid has a high temperature, the cleanliness level should at least reach 8 according to NAS 1638 or 17/14 according to ISO/DIS 4406.

Working Pressure Range

Maximum pressure at working port A or B:

	Shaft End A/Z	Shaft End B/P
Nominal pressure PN	40MPa	35MPa
Maximum pressure Pmax	45MPa	40MPa

Flow Direction

CW rotation	A to B
CCW rotation	B to A

Speed Range


No limit to minimum speed nmin.

If uniformity of motion is required, n_{min} must not be less than 50 rpm. See the operating parameters for the maximum speed.

Case Drain Pressure

FKM shaft seal

The lower the speed and case drain pressure are, the longer the service life of the shaft seal is. The figure shows the permissible limit values of the shaft seal at intermittent pressure load. Do not exceed the values. Constant pressure within the case drain pressure limit will reduce life of the shaft seal.

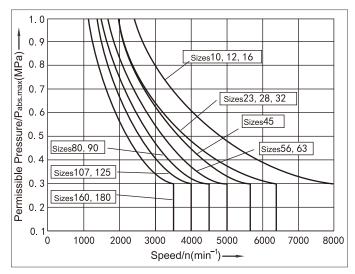



Technical Data

Size				23	28	32	45	56	63
Displacement		$V_{ ext{g max}}$	mL/r	22. 9	28. 1	32. 0	45. 6	56. 1	63. 0
Maximum		N _{max}	rpm	6300	6300	6300	5600	5000	5000
speed		N _{max} 1) Intermittent	rpm	6900	6900	6900	6200	5500	5500
Maximum flow	at n _{max}	q v max	L/min	144	176	210	255	280	315
Equivalent		Tk	Nm/MPa	3. 6	4. 45	5. 09	7. 25	8. 9	10. 0
torque Torque at	Δр=35МРа	Т	Nm	126	156	178	254	312	350
	Δр=40МРа	Т	Nm	144	178	204	290	356	400
Case volume			L	0. 20	0. 20	0. 20	0. 33	0. 45	0. 45
Moment of inertia of drive shaft		J	kgm²	0. 0012	0. 0012	0. 0012	0.0024	0.0042	0. 0042
Weight	HA2FM	М	kg	9. 5	9. 5	9.5	13. 5	18	18
	HA2FE	М	kg	10. 5	10.5	10. 5	15	18	19
	HA2FMT	М	kg	_	10. 7	_	_	_	_
Size				80	90	107	125	160	180
Displacement		V _{g max}	mL/r	80. 4	90.0	106. 7	125	160. 4	180. 0
Maximum		n max	rpm	4500	4500	4000	4000	3600	3600
speed		N _{max} 1) Intermittent	rpm	5000	5000	4400	4400	4000	4000
Maximum flow	at n _{max}	q v max	L/min	360	405	427	500	577	648
Equivalent		Tk	Nm/MPa	12. 7	17. 0	19. 9	25. 4	28. 6	31.8
torque Torque at	Δр=35МРа	Т	Nm	445	501	595	697	889	1001
	Δр=40МРа	Т	Nm	508	572	680	796	1016	1144
Case volume			L	0. 55	0. 55	0. 80	0. 80	1. 10	1.10
Moment of inertia of drive shaft		J	kgm²	0. 0072	0. 0072	0. 0116	0. 0116	0. 0220	0. 0220
Weight	HA2FM	М	kg	23	23	32	32	45	45
	HA2FE	М	kg	23	25	34	36	47	47

^{1) :} Intermittent maximum speed: overspeed for unloading and overhauling processing, t < 5s and $\Delta p < 15MPa$

> Specification Calculation

 $q_v = \frac{V_g \boldsymbol{\cdot} n}{1000 \boldsymbol{\cdot} \eta_v}$ V_g = Displacement per revolution, mL/r [L/min] Input flow

 Δp = Differential pressure, MPa


 $T = \frac{V_g \boldsymbol{\cdot} \Delta p \boldsymbol{\cdot} \eta_{mh}}{20 \boldsymbol{\cdot} \pi}$ = Speed, rpm Torque [Nm]

= Volumetric efficiency


 $P = \frac{2\pi \cdot T \cdot n}{60000} = \frac{q_v \cdot \Delta p \cdot \eta_t}{600}$ η_{mh} = Mechanical-hydraulic efficiency Power [KW]

= Total efficiency η_{t}




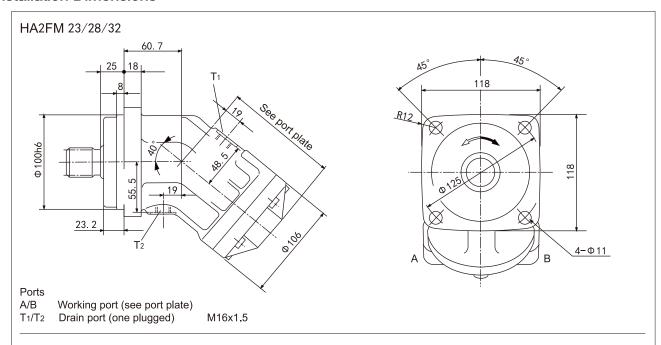


Port Plate

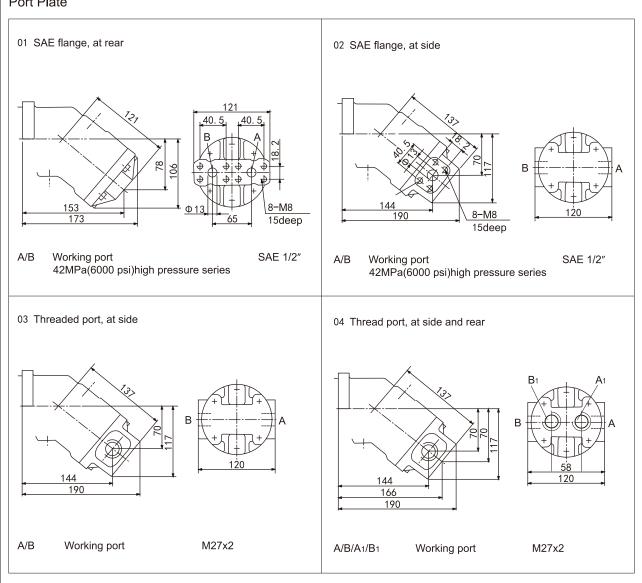




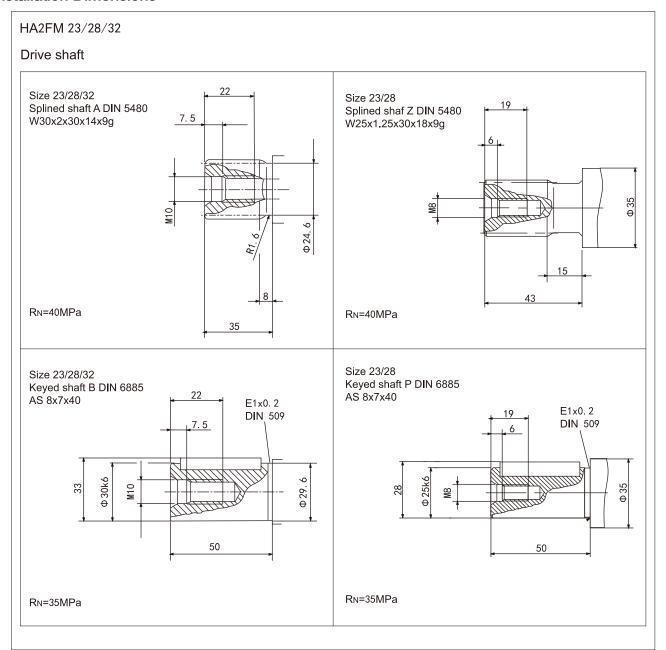



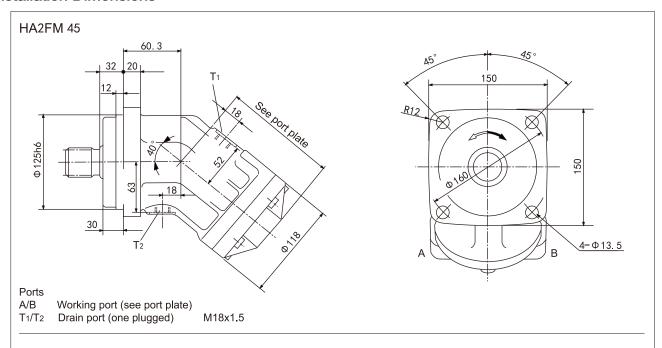


Port Plate

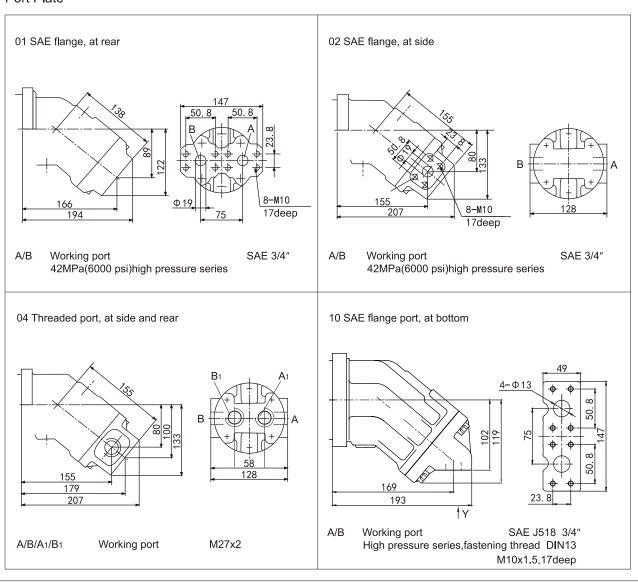





HA2FM 45 Drive shaft Splined shaft A DIN 5480 Splined shaft Z DIN 5480 W32x2x30x14x9g W30x2x30x14x9g 28 9.5 9.5 Φ35 Φ26.6 8 R_N=40MPa R_N=40MPa 35 Keyed shaft P DIN 6885 AS 8x7x50

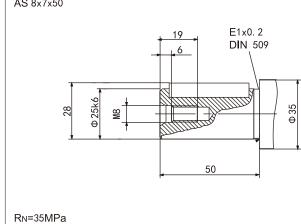




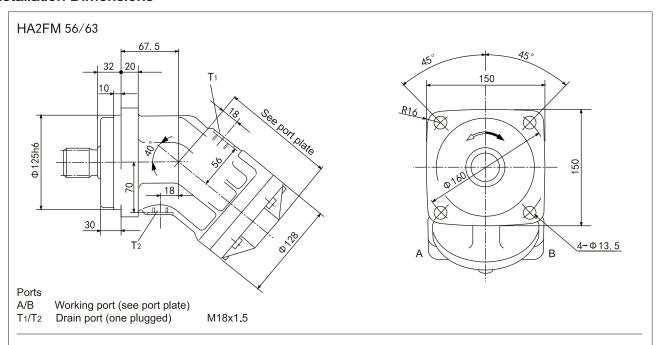


Port Plate

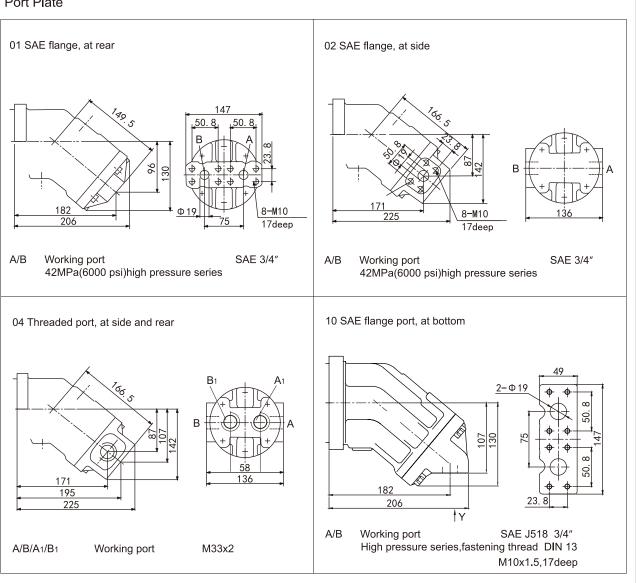




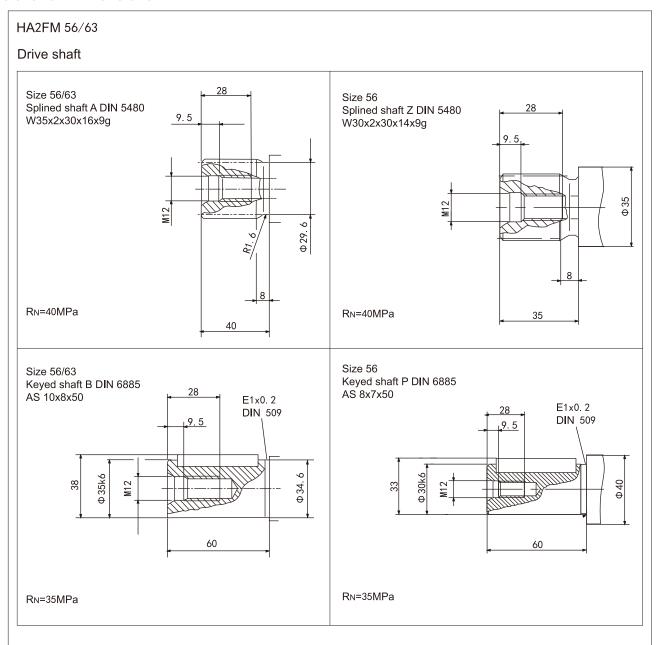




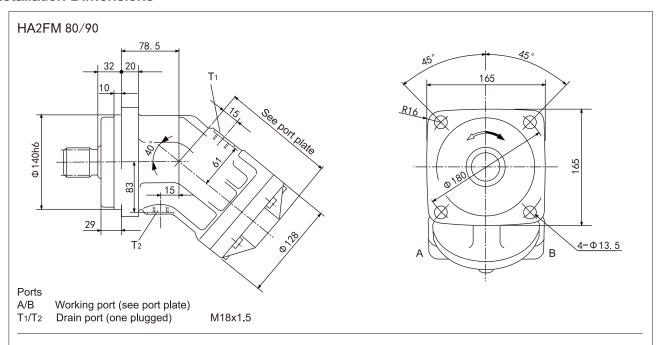


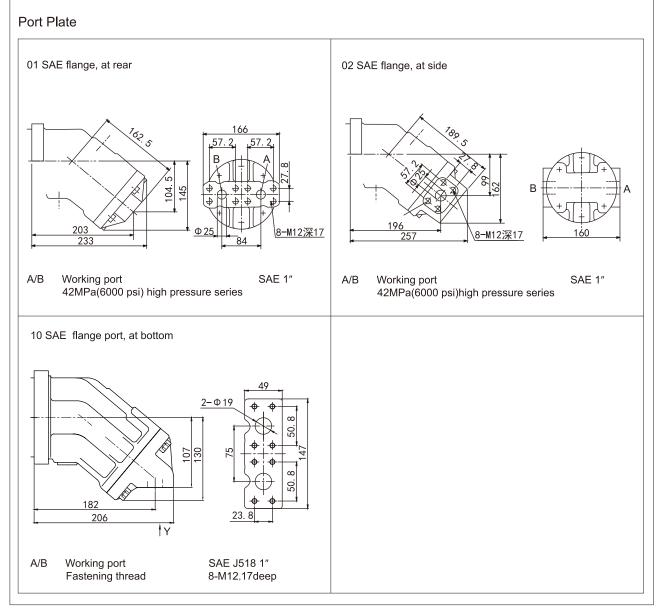




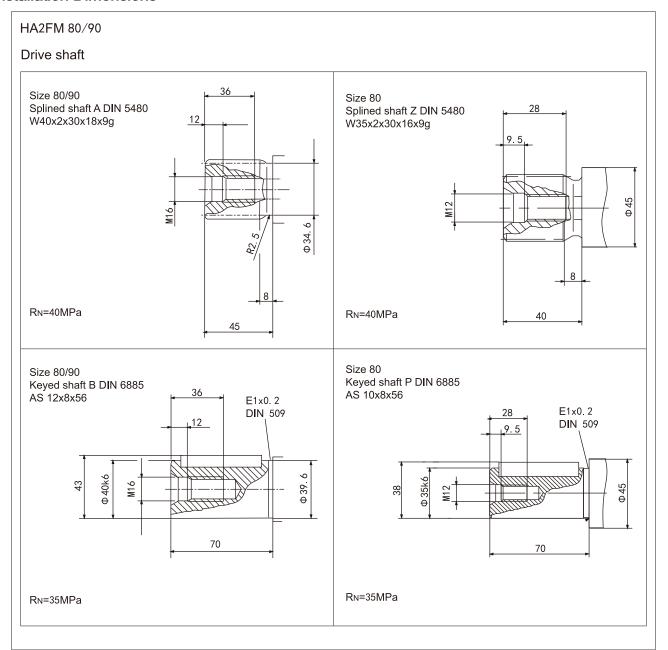




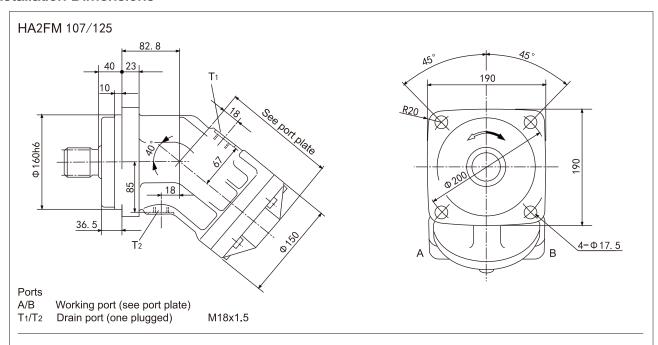


Port Plate

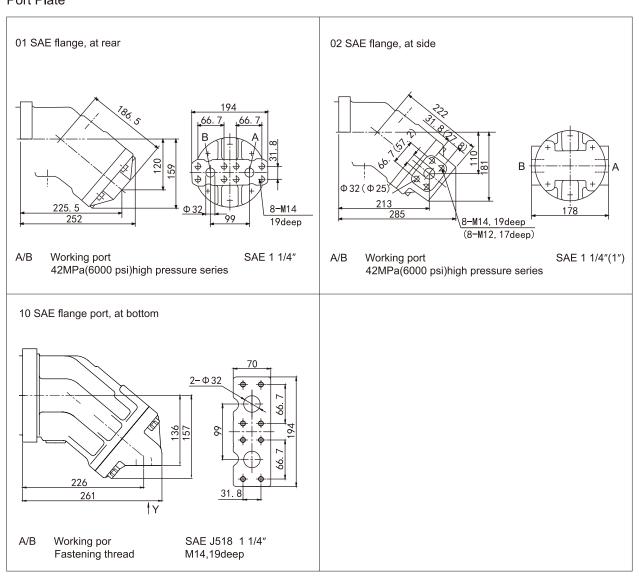




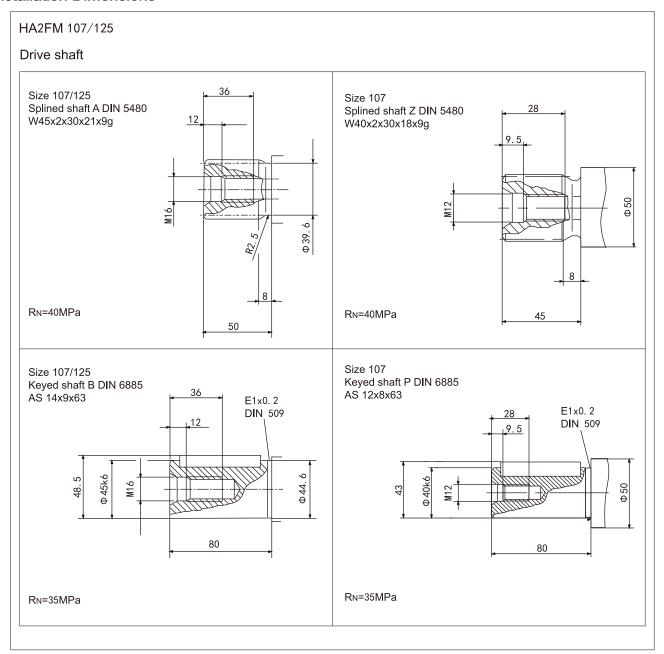




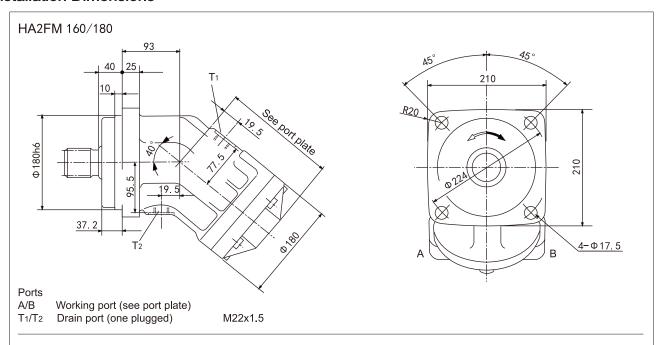


Port Plate

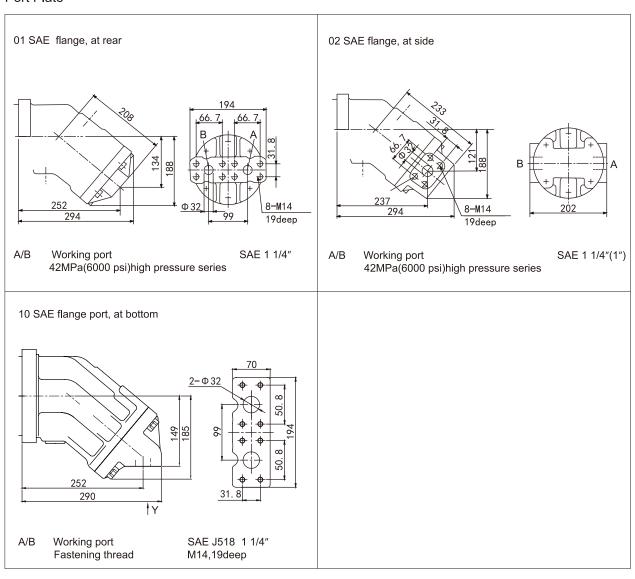



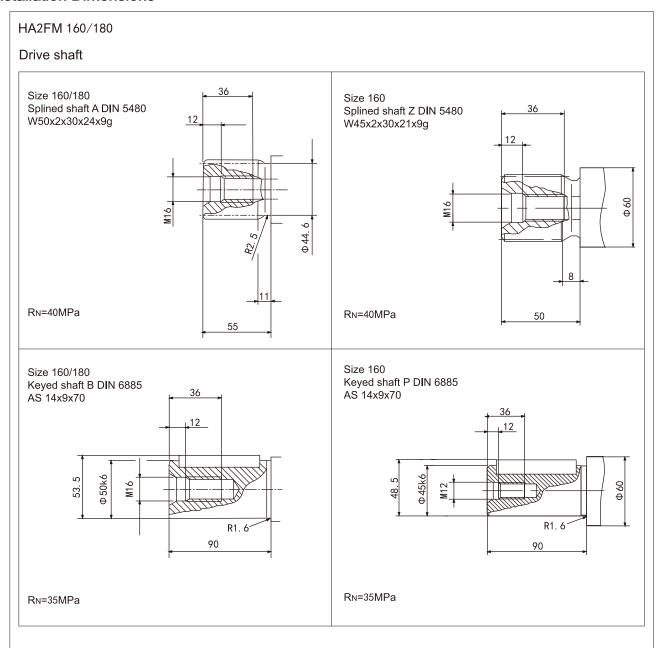



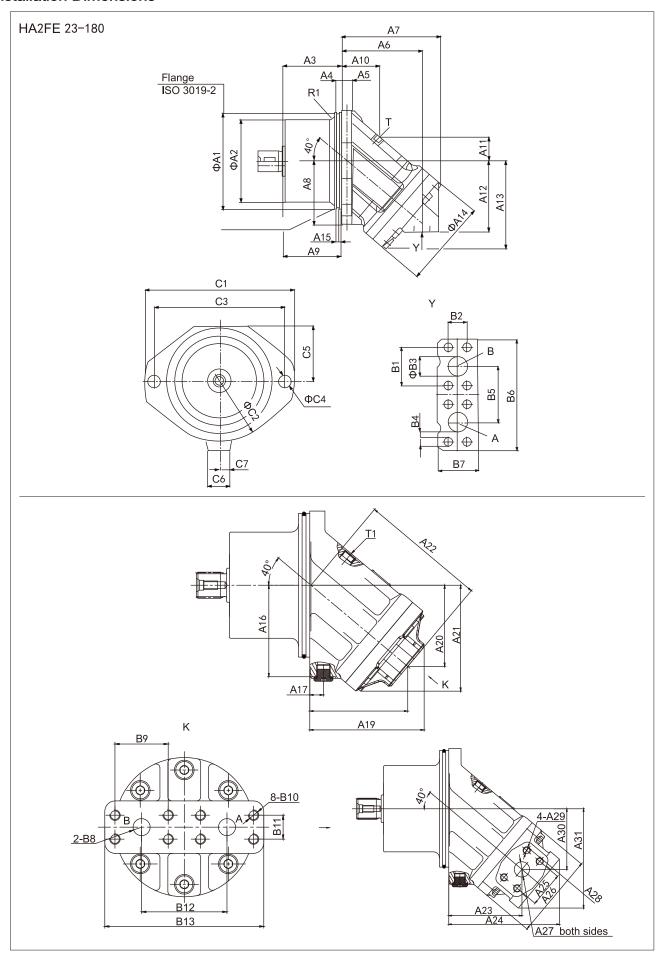



Н	Δ	2	F	F	23	<u> </u>	Я	Λ
	$\overline{}$	_		_		, ,	O	v


Size	Ф А1	Ф А2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	Ф А14	Ф А15
23/28/32	135 ⁰ _{0.025}	94 ⁰ _{-0.5}	88.8	15	16	94	114	95	87. 1	45	27	91	105	106	5. 2
45	160 ⁰ _{0.025}	117-1.5	92. 3	15	18	109	133	106	90	50	31. 3	102	119	118	5. 2
56/63	160 ⁰ _{0.025}	121 <u>-</u> 0.5	92.3	15	18	122	146	109	90	59	34	107	128	128	5. 2
80/90	190 0. 029	140. 3 ⁰ _{-0.5}	110	15	20	127	157	123	106	54	41	120	144	138	5. 2
107/125	200-0.029	152. 3 ⁰ _{-0.5}	122.8	15	20	143	178	135	119	58	41	136	158	150	5. 2

Size	A16	A17	A18	A19	A20	A21	A22	A23	A24	A25	Ф А26	Ф А27	A28	A29	A30
45	104. 5	20	_	_	_	_	ı	109. 2	160. 4	50.8	118	19	23.8	M10, 17deep	78. 7
56/63	104. 5	20	_	_	_	_	_	129. 7	186. 3	50.8	128	20	23.8	M10, 17deep	92. 5
80/90	121	18	126	156	104. 5	145	162. 5	119	180	57. 2	138	25	27. 8	M12, 17deep	99
107/125	135	22	-	_		_	-	130	202	66. 7	150	32	31.8	M14, 19deep	109.6

Size	R1	O-ring	B1	B2	ФВ3	B4	B5	В6	В7	Port A/B	Drain Port T
23/28/32	10	126*4	40.5	18. 2	13	M8, 15deep	59	115	40	1/2 in	M16*1.5,12deep
45	10	150*4	50.8	23. 8	19	M10, 17deep	75	147	49	3/4 in	M18*1.5,12deep
56/63	10	150*4	50.8	23. 8	19	M10, 17deep	75	147	48	3/4 in	M18*1.5,12deep
80/90	10	180*4	57. 2	27. 8	25	M12, 17deep	84	166	60	1 in	M18*1.5,12deep
107/125	16	192*4	66. 7	31. 8	32	M14, 19deep	99	194	70	11/4 in	M18*1.5,12deep

Size	Ф В8	B9	B10	B11	B12	B13	C1	C2	С3	C4	C5	C6	C7
23/28/32	-	_	_	_	_	_	188	154	160	14	71	42	13
45	-	-	_	_	_	-	235	190	200	18	82	47. 5	15
56/63	-	_	_	_	_	-	235	190	200	18	82	36	0
80/90	25	57. 2	M12, 17deep	27. 8	84	166	260	220	224	22	98	40	0
107/125	ı	_	_	-	-	-	286	232	250	22	103	40	0

> Drive shaft

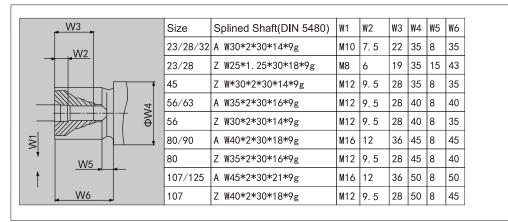

HA2FM/E | Axia| Piston Fixed Motor



> Flushing and Boost-pressure Valve

Overview

The flushing valve is used to prevent over-temperature. The minimum boost pressure must be guaranteed for flushing of a closed circuit.

Hydraulic fluid from the low-pressure side is directed into the motor housing. Then, it is fed into the reservoir together with the case drain fluid. The hydraulic fluid removed out of the circuit must be replaced by that from the boost-pressure valve.

Cracking pressure (1.6 MPa, fixed setting) of the boost-pressure valve must be considered when setting the boost pressure of the pump in a closed circuit.

Standard flow

At low pressure △p=2.5MPa


At low procedure Zp	z.own a
Size	Flushing Flow
23/28/32/45/56/63	3. 5L/min
80/90	5L/min
107/125	8L/min
160/180	10L/min


Orifices can be used to adjust the flow as necessary.

If nonstandard flows are required, please specify the required throttle valve when ordering.

Port Plate


027: SAE flange ports, at side

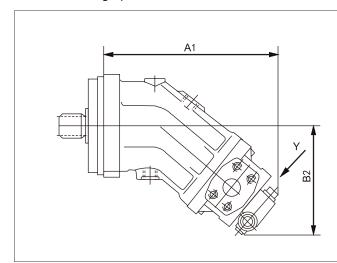

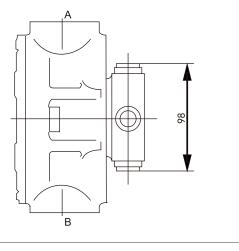


Size	A1	B2
23/28/32	196	138
45	223	151
56/63	239	159
80/90	268	173.5
107/125	294	192
160/180	315	201

Circuit diagram

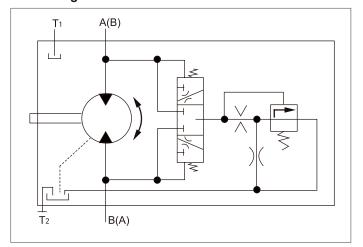



> Flushing and Boost-pressure Valve

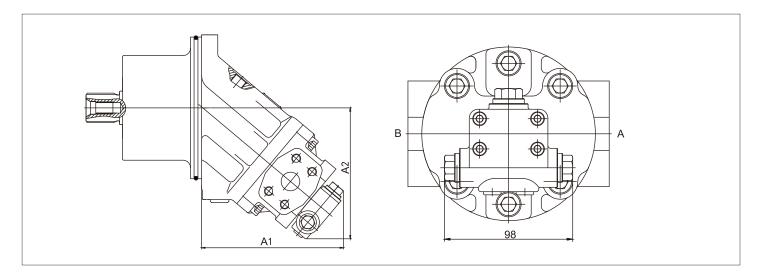

Size	A1	B2
45	151	148.5
56/63	167	156
80/90	190	173. 5
107/125	211	192



Pressure Relief Valve

Overview

The pressure relief valve prevents overload of the hydraulic motor. Once it reaches the set cracking pressure, the hydraulic fluid flows from the high-pressure side to the low-pressure side.


The pressure relief valve can only be used in combination with port plates 181 and 191. (The counterbalance valve is to be installed to the port plate 181. See the page below.)


Setting range of cracking pressure_____50-420 ba Please specify in plain text the cracking pressure of the pressure relief valve when ordering.

Circuit diagram

Make sure to ask for the installation diagram before completion of the final design.Dimensions in mm.

Version without pressure boost facility, "191"

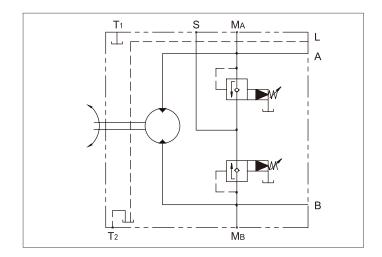

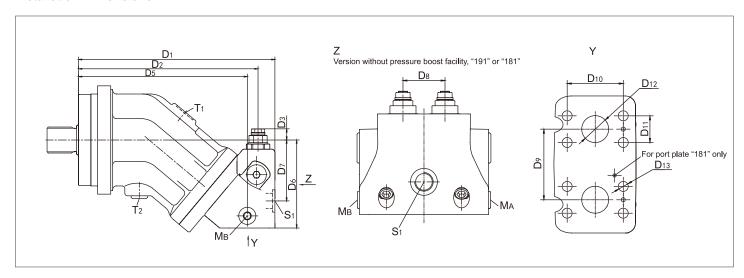

Size	D1	D2	D3	D4	D5	D6	D8	D9	D10	D11	D12	D13
80/90	271	243	17. 5	59	229	134	42	75	57. 2	27. 8	Ф 25	M12, 18deep

Size	A/B	S1	MA, MB1)	Pst1)
80/90	1 in	M26*1. 5, 16deep	M26*1. 5, 16deep	G 1/4



Counterbalance Valve BVD

Function

Counterbalance valves for travel drives/winches are designed to reduce the danger of overspeed and cavitation of axial piston motors in open circuits. Cavitation occurs if, during brake, when going downhill or during load lowering process, the motor speed is greater than that at the given inlet flow.

If the inlet pressure falls, the counterbalance spool moves to throttle the return flow and brake the motor until the inlet pressure returns to approx 20 bar.

Note


- -The counterbalance valve cannot replace the mechanical service brake and holding brake.
- -For the design of the brake release device, we must know the following data for the mechanical holding brake:

The cracking pressure


The volume of the counterbalance spool between the minimum stroke (brake closed) and maximum stroke (brake released with 21 bar)

The required closing time for warming up (oil viscosity at approx 15 mm²/s)

Circuit diagram

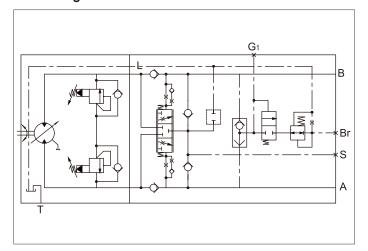

Installation Dimensions-HA2FM

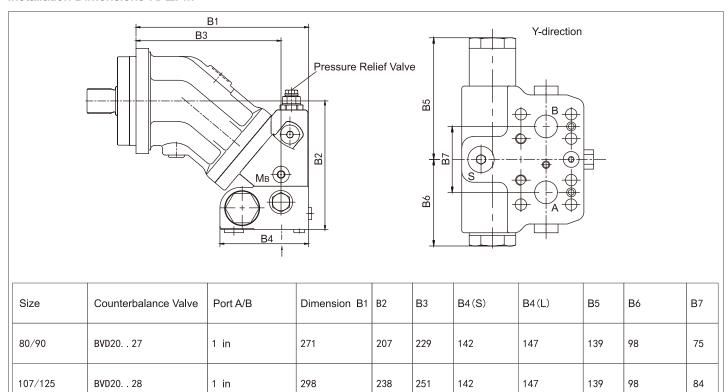

239

251

158

163

175

120.5

84

BVD25..38


1 1/4 in


107/125



Counterbalance Valve BVD

Installation Dimensions-HA2FE

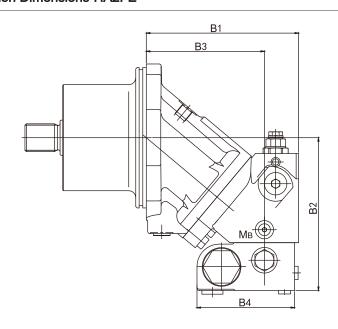

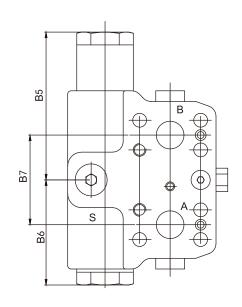

Size	Counterbalance Valve	Port A/B	Dimension B1	B2	B3	B4(S)	B4(L)	B5	B6	B7
80/90	BVD20 27	1 in	193	207	151	142	147	139	98	75
107/125	BVD20 28	1 in	216	238	168	142	147	139	98	84
107/125	BVD25 38	1 1/4 in	216	239	168	158	163	175	120. 5	84
160/180	BVD25 38	1 1/4 in	249	260	202	158	163	175	120. 5	84

Ports

Name	Usage	Product	Standard	Size ¹⁾	Max. Pressure(bar)	State ⁴⁾
A/B	Service line		SAE J518	See table above	420	0
S	Boost port	BVD 20 BVD 25	DIN 3852 ³⁾ DIN 3852	M22*1. 5, 14deep M27*1. 5, 16deep	30 30	Х
Br	Brake release port, reduced high pressure	L	DIN 3852 ³⁾	M12*1. 5, 12. 5deep	30	Х
Gmt	Brake release port, high pressure	S	DIN 3852 ³⁾	M12*1. 5, 12. 5deep	420	Х
MA/MB	Measuring port pressure A/B		ISO 6149 ³⁾	M12*1. 5, 12deep	420	Х

- 1) : See safety instructions for the maximum tightening torque.
- 2) : Depending on the application, momentary pressure peaks may occur. Keep this in mind when selecting measuring devices and fittings.
- 3) : The countersink may be deeper than specified in the standard.
- 4) : O=must be connected (plugged on delivery) X=plugged (in normal operation)




Counterbalance Valve BVD

Mounting the counterbalance valve

The counterbalance valve is fastened to the motor with two set screws (transport lock) on delivery. The set screws may not be removed when mounting the working lines. If the counterbalance valve and the motor are delivered separately, the counterbalance valve must first be fastened to the motor port plate with the supplied set screws. The counterbalance valve is finally mounted to the motor by fitting the SAE flange.

6 Screws(1,2,3,4,5,8) _____Length B1+B2+B3 2 Screws(6,7) _____Length B3+B4

Screw	Strength Grade	Tightening Torque(Nm)
M6*1 (set screw)	10.9	15. 5
M10	10.9	75
M12	10.9	130
M14	10.9	205

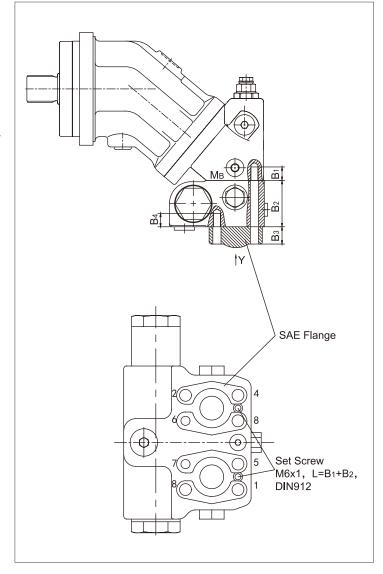

Tighten the screws in turn (from 1 to 8) in two steps (see the diagram on the right).

Step 1: Tighten the screws to a half of the tightening torque. Step 2: Tighten the screws to the maximum tightening torque (see the table below).

Size	28/32/45	56/63	80/90	107/125/160/180	107/125						
Port plate	18										
B1 ¹⁾	M10*1. 5, 17deep	M10*1. 5, 17deep	M12*1. 75, 18deep	M14*2, 19deep	M12*1. 75, 17deep						
B2	78 ²⁾	68	68	85	68						
В3	Applicable to specific customers										
B4	M10*1. 5, 15deep	M10*1. 5, 15deep	M12*1. 75, 16deep	M14*2, 19deep	M12*1. 75, 17deep						

1) : Minimum required threads:1*Φthread

2) : Sandwich plate valve included



Installation and Commissioning Instructions-HA2FM

Installation of counterbalance valve

The motor must be filled with hydraulic fluid during startup and commissioning. The motor should be started at low speed under no load until air in the system is thoroughly bled.

The hydraulic fluid in the housing leaks through the working lines after a longer standstill.

Therefore, make sure the housing is filled with hydraulic fluid before restart. The leakage should be directed to the reservoir via the highest drain port of the housing.

Installation position

Any position you prefer. For installation position "drive shaft upwards", use motor with air bleed port R.

Above-reservoir installation

Above-reservoir installation means that the motor is installed above the minimum fluid level of the reservoir.

- -The procedure is the same as that for below-reservoir installation.
- -Installation positions 1 and 2:

The hydraulic fluid in the housing may leak via the working lines and air may come inside (through the shaft seal) in the case of a longer standstill. The bearings may not be properly lubricated at restart. Hence, hydraulic fluid must be filled via the highest drain port before restart.


-Installation position 2 (drive shaft upwards)

The bearings are not sufficiently lubricated in this position as long as the housing is not filled with hydraulic fluid. Insert a check valve (0.05 MPa cracking pressure) in the drain line to prevent overflow of hydraulic fluid from the drain port.

Below-reservoir installation

The motor is installed below the minimum fluid level of the reservoir, (standard)

- -Fill the axial piston motor with hydraulic fluid via the highest drain port before startup.
- -For the shaft upwards installation position, make sure to fully fill the motor housing before startup. Air bubbles at bearings will cause damage to the axial piston unit.
- -Run the motor at low speed (initial speed) until the entire circuit is filled with hydraulic fluid.
- -Minimum immersion depth of suction line and drain line in reservoir: 200 mm (from the minimum fluid level of the reservoir).

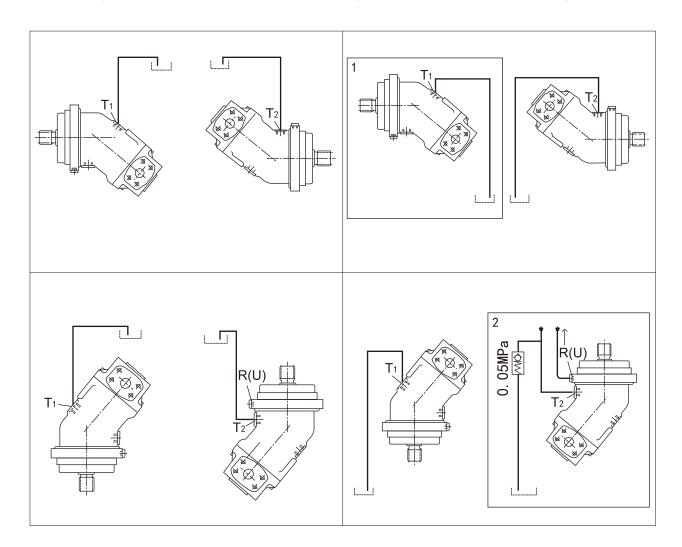



Installation and Commissioning Instructions-HA2FE

Overview

The motor (housing) must be filled with hydraulic fluid during startup and commissioning.

The motor should be started at low speed under no load until air in the system is thoroughly bled.

The hydraulic fluid in the housing leaks through the working lines after a longer standstill. Make sure the housing is filled with hydraulic fluid before restart.

The leakage should be directed to the reservoir via the highest drain port of the housing.

Installation position

Shaft horizontal or vertically downward.

Top installation

The motor is installed below the minimum fluid level of the reservoir. (standard)

- Fill the axial piston motor with hydraulic fluid via the highest drain port before startup.
- Run the motor at low speed until the entire circuit is filled with hydraulic fluid. (Bleed the air via working ports A and B if the lines are long).
- -Minimum immersion depth of drain line in reservoir: 200 mm (from the minimum fluid level of the reservoir).

Bottom installation

The motor is installed above the minimum fluid level of the reservoir.


- -The procedure is the same as that for top installation.
- -Additional measures for installation position 1:

The hydraulic fluid in the housing may leak via the working lines (and air may come inside through the shaft seal) in the case of a longer standstill.

The bearings may not be properly lubricated at restart. Hence, hydraulic fluid must be filled via the highest drain port before restart.

-"Shaft horizontal" installation position:

The working lines must not face upward if the installation position is above the reservoir.

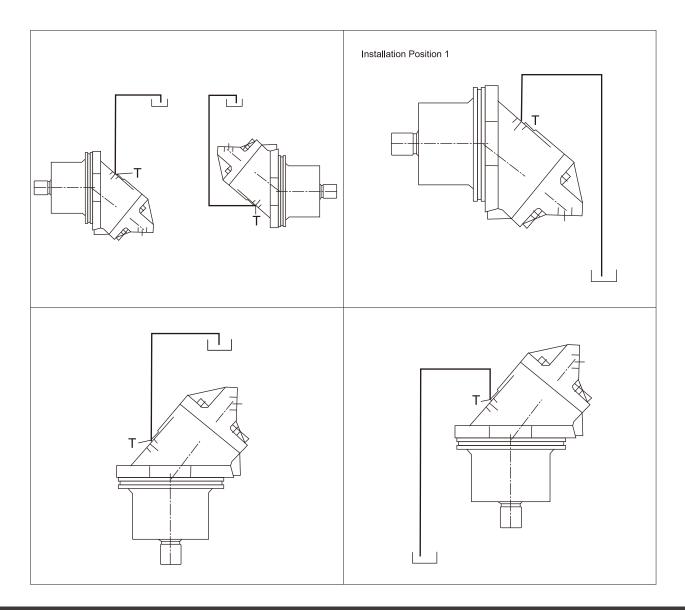





Since 2002

Over twenty years of deep cultivation in the field of hydraulic Solutions

HYTEK is a high technology enterprise integrating R&D, production, sales and service of hydraulic power products. Provides professional hydraulic transmission control products and solutions for construction machinery, road machinery, material handling machinery, agricultural and forestry machinery, industrial equipment and other fields. After more than 20 years of continuous R&D, technological innovation, market development and application services, technical level and the scale of production and sales have been on the forefront of the industry. Hytek has been committed to helping the development of subdivided industries with innovative hydraulic technology, "focusing on the challenges and pressures of customers, providing competitive products and solutions, reducing costs and increasing efficiency for customers, and continuously creating maximum value".

Product Series



Please visit the official website: en.hytek.cn

HYTEK POWER CO.,LTD.

No.156, West Yuele Street, Lucheng District, Wenzhoucity 325029, Zhejiang, CHINA Email: globalsales@hytek.cn

HYTEK-REV1.0 03/2025

If there are any other modifications, no further notice will be given.